

HART to PROFIBUS DP/MODBUS Gateway GT200-HT-DP

User Manual

REV 1.5



SST Automation

E-mail: SUPPORT@SSTCOMM.COM

WWW.SSTCOMM.COM

Catalog

1 Product Overview.....	4
1.1 Product Function.....	4
1.2 Product Features.....	4
1.3 Technical Specifications.....	4
1.4 Safety and Explosion-Proof Features.....	5
1.5 Related Products.....	5
2 Quick Start Guide.....	6
2.1 Configuration of Gateway.....	6
2.1.1 Pre-configured Settings.....	6
2.1.2 Software Configuration.....	6
2.2 Function Demo.....	9
3 Hardware Descriptions.....	11
3.1 Product Appearance.....	11
3.2 Indicators.....	12
3.3 Configuring Switch/Button.....	12
3.3.1 Status Setting Switch.....	12
3.3.2 PROFIBUS DP/ Modbus Address Setting Button.....	13
3.3.3 Internal / External Sampling Resistor Switch.....	13
3.4 Interface.....	14
3.4.1 Power Interface.....	14
3.4.2 PROFIBUS DP interface.....	14
3.4.3 RS485/RS422 Interface.....	14
3.4.4 RS-232 Interface.....	16
3.4.5 HART Interface.....	16
3.5 Topology of GT200-HT-DP and Fieldbus Devices.....	17
4 Software Instructions.....	19
4.1 Software Interface Description.....	19
4.2 Software Functional Specifications.....	21
4.2.1 Connect with the Hardware.....	21
4.2.2 Upload Configuration.....	21
4.2.3 Configure Fieldbus.....	22
4.2.4 Configure the HART Fieldbus.....	25
4.2.5 Conflict Detection.....	30
4.2.6 AutoMap.....	31
4.2.7 Download Configuration.....	31
4.2.8 Memory.....	32
4.2.9 Diagnose.....	33
4.2.10 Serial Debug.....	36
4.2.11 Switching Tools.....	38



GT200-HT-DP
HART to PROFIBUS DP/MODBUS Gateway
User Manual

5 Working Principle.....	39
5.1 Flowchart of Executing One HART Command.....	42
5.2 Universal Sending and Receiving Data.....	42
5.3 Trigger Command.....	43
5.4 Data Exchange with PROFIBUS DP.....	44
5.5 Data Exchange with Modbus.....	44
6 In STEP7: Access Data of Gateway and Select Data Module.....	45
6.1 How STEP7 Access Data of Gateway.....	45
6.2 How STEP7 Select Data Module.....	46
7 Installation.....	48
7.1 Machine Dimension.....	48
7.2 Installation Method.....	48

1 Product Overview

1.1 Product Function

GT200-HT-DP is a gateway that provide a seamless connection between HART and PROFIBUS DP or Modbus. At HART side it can be configured as a primary master or the secondary master, and acts as slave at the PROFIBUS DP or Modbus side. The GT200-HT-DP's PROFIBUS DP and Modbus cannot work simultaneously.

1.2 Product Features

- Powerful Serial function: Support the interconnection between HART and Modbus , also support transparent transmission between HART and serial port.
- Multi debugging functions: It can display the exchanging data, and diagnosis the HART command

1.3 Technical Specifications

- [1] Used as a primary or the secondary HART master
- [2] Supports one HART-channel, under multi-point mode, support connecting at most 13 HART slaves with gateway internal resistor and support connecting 15 HART slaves with an external resistor (250Ω)
- [3] Supports single-point and multi-point mode at the HART side
- [4] Under single-point mode, support data burst operation
- [5] Supports all commands of the HART protocol
- [6] Each HART command can be configured for change-of-state output, polling output, initialization output or disable output
- [7] Supports up to 128 HART commands, HART output data buffer is up to 1000 bytes, and the input data buffer is up to 1600 bytes
- [8] Supports an internal or external HART sampling resistor
- [9] Supports PROFIBUS DP V0

- [10] Adaptive baud rate on PROFIBUS (9600 bit/s ~ 12 Mbit/s)
- [11] PROFIBUS protocol: output data bytes \leq 244 bytes, input data bytes \leq 244bytes, Max Input +Max Output \leq 488bytes
- [12] The serial port can be configured as Modbus slave, supports function code: 03H, 04H, 06H, 10H
- [13] Modbus slave supports RTU and ASCII mode
- [14] The serial port can be configured as universal mode, and achieve transparent data transmission with HART slave devices
- [15] Power: 24VDC (9V~30V), 80mA (24VDC)
- [16] Operating Temp: -4°F to 140°F (-20°C to 60 °C), Rel. Humidity: 5%-95% (non-condensing)
- [17] External dimension(W*H*D): 1.6in*4.9in*4.3in (40mm* 125mm * 110mm)
- [18] Installation: 1.38in (35mm) DIN RAIL
- [19] Protection Level: IP20

1.4 Safety and Explosion-Proof Features

GT200-HT-DP is not the product with the features of safety and explosion-proof, please put it in the control room when using.

1.5 Related Products

The related products of our company include: GT200-HT-RS, GT200-3HT-RS and GT200-DP-RS etc.

If you want to get more information about related products, please visit SSTCOMM website:
<http://www.sstcomm.com>.

2 Quick Start Guide

The following example introduces the use of the Gateway.


2.1 Configuration of Gateway

2.1.1 Pre-configured Settings

1. Turn gateway's configuration DIP switch to "ON";
2. Connect the RS232 interface of gateway and the serial port of the computer with the serial cable. Wiring methods refer to section 3.4.4 of this manual;
3. Power it on; the LED display show "CF" indicates that the gateway is in the configuration mode. Run the SST-HT-CFG to start the gateway configuration.


2.1.2 Software Configuration

1. Run the SST-HT-CFG software installed on your computer.
2. Click "Fieldbus" in the tree view on the left, the configuration table is shown on the right as below:

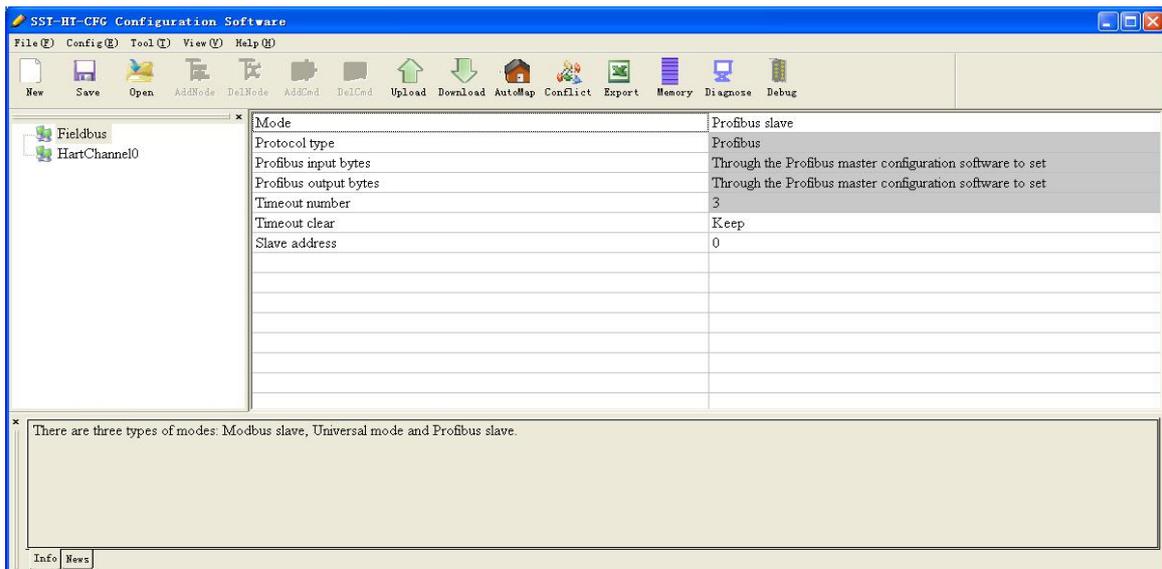

GT200-HT-DP HART to PROFIBUS DP/MODBUS Gateway User Manual


3. Click “HartChannel0” in the tree view on the left, the configuration table is shown on the right as below:

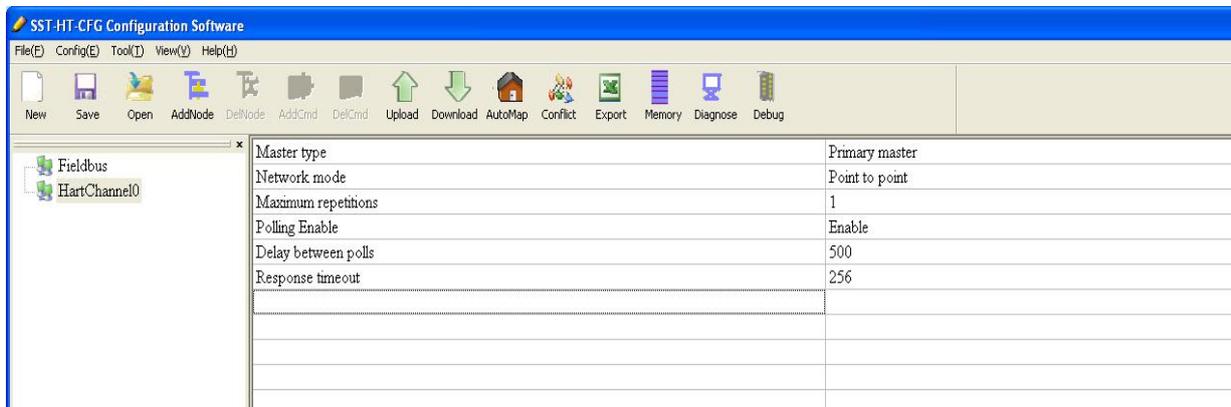

Then you can complete the configuration of HART network.


Note: HART protocol specifies that the slave device which address is 0 must work in single-point mode. In single-point mode the digital communication and analog communication is allowed to exist at the same time. The Slave with address 1~15 works in multi-point mode. In multi-point mode the analog output of the device is the minimum value (e.g. 4mA), only allows digital communication. The protocol also specifies that the default factory address of field device is 0.

4. Right-click HartChannel0, in the pop-up menu, select “Add Node”, as shown below:

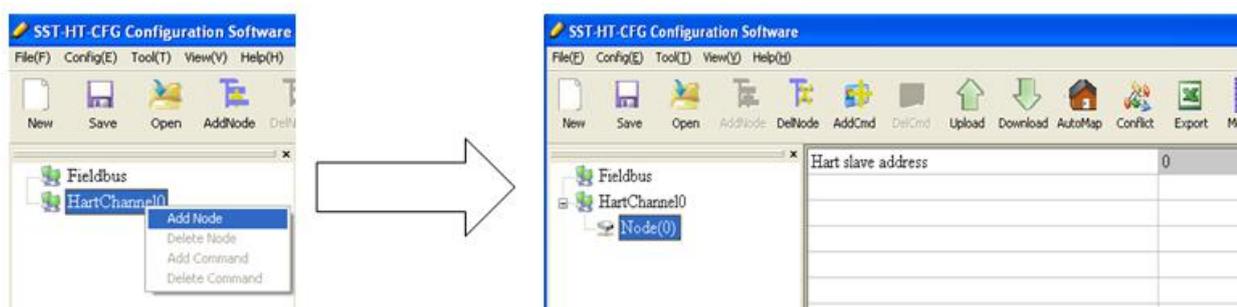


5. Right-click “Node(0)”, in the pop-up menu, selects “Add command” to add a command (Command ID1) in dialog box, and then click OK to return.

GT200-HT-DP HART to PROFIBUS DP/MODBUS Gateway User Manual

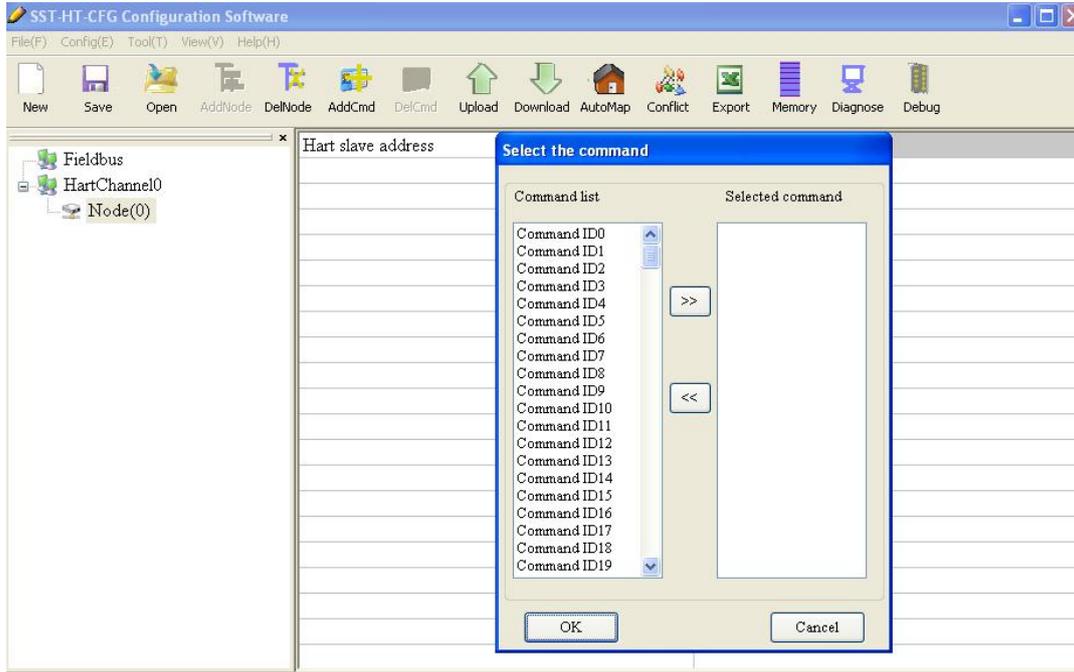


6. Click the “command ID1”, with the configuration table in the figure appears to the right:

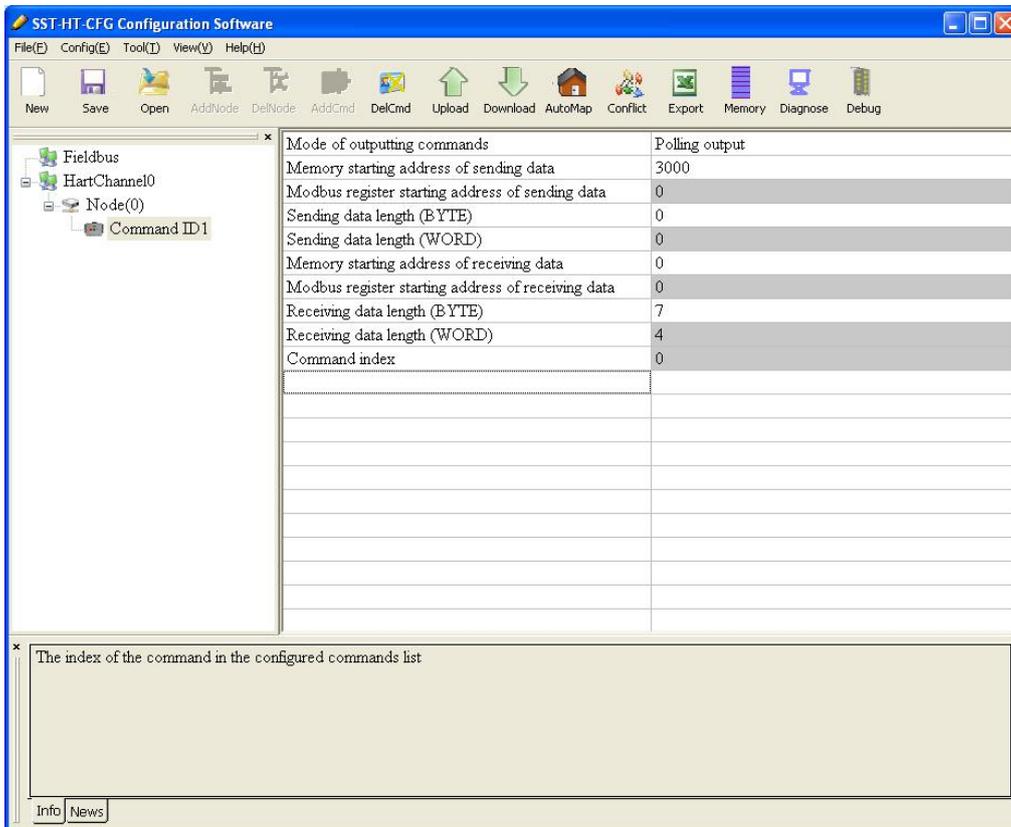

Press Enter to confirm.




7. Click the icon  on the toolbar, select the serial port with which the gateway is connected to the computer, and then click Download:

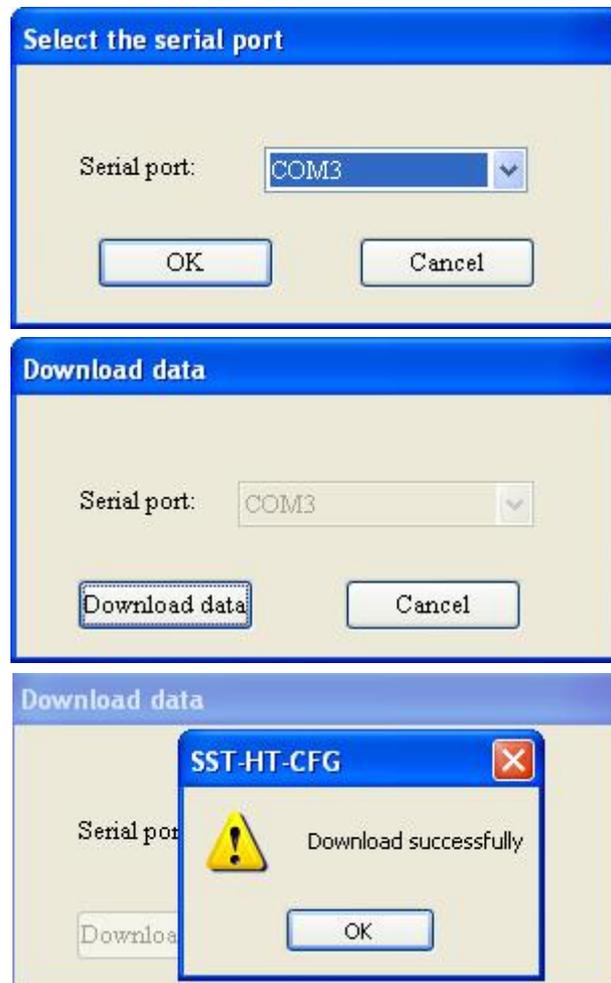

2.2 Function Demo


HART interface of the gateway connects with a 2-wire pressure transmitter with slave address 0; PROFIBUS DP master uses Siemens S7-300 series PLC, the modeling software uses STEP7. In data exchange window, you can see the main variable value of the pressure transmitter:

GT200-HT-DP HART to PROFIBUS DP/MODBUS Gateway User Manual

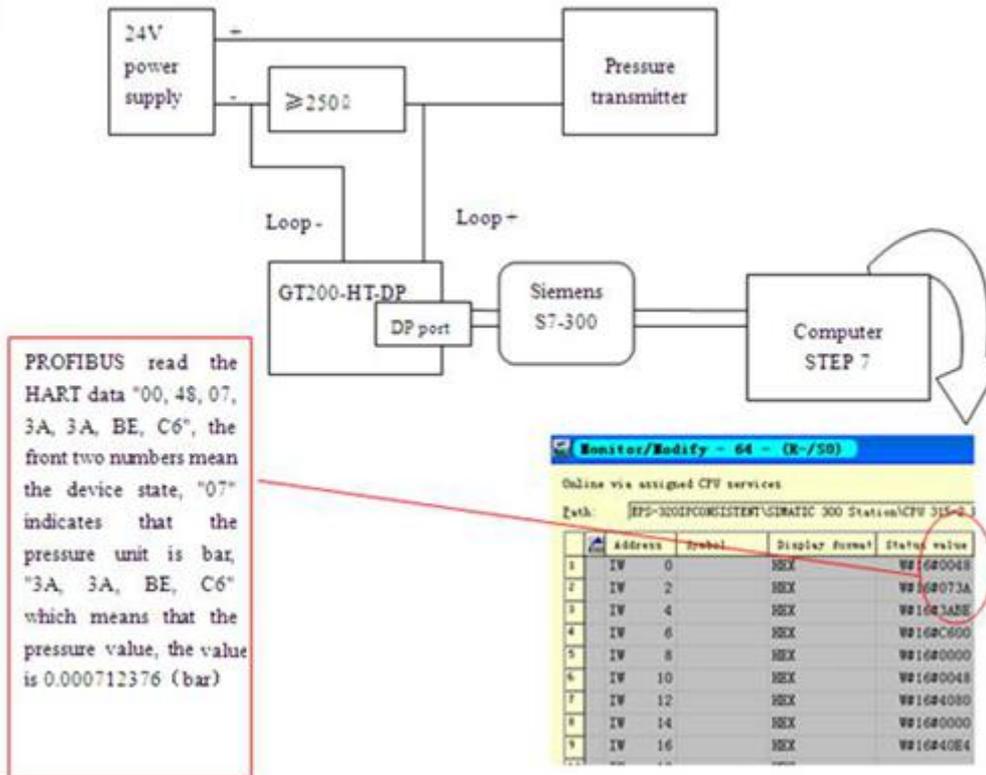

3 Hardware Descriptions

3.1 Product Appearance

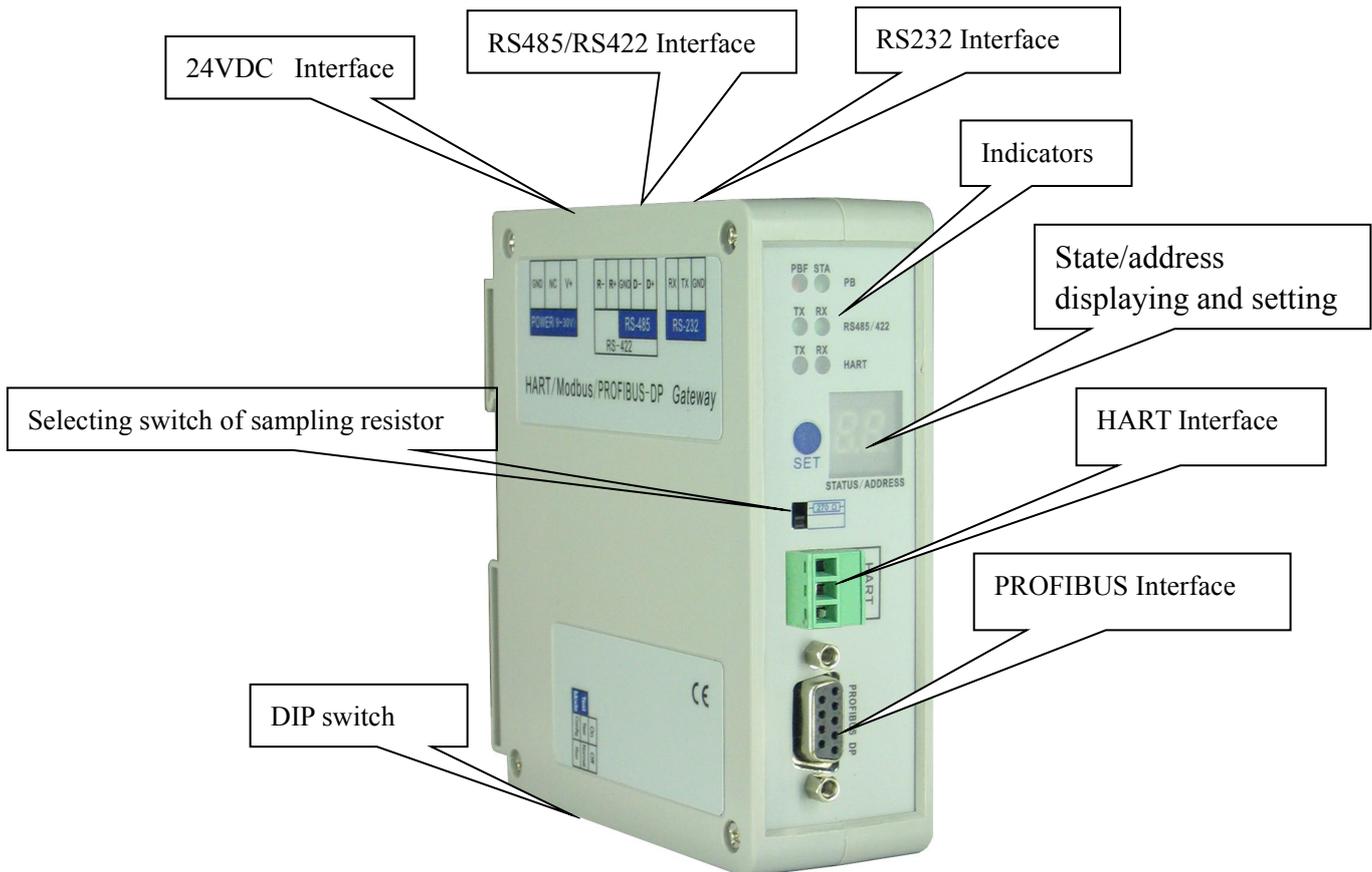

Note: This picture is for reference only. Product appearance should refer to the real object


3.2 Indicators

Indicator LED	State	Status Description
PBF	Always Red	PROFIBUS DP communication fails
	OFF	Communication is ok
STA	Green Blinking	PROFIBUS DP bus data is communicating
	OFF	No data communication
TX	Blinking	Bus data is sending
	OFF	No data is sending
RX	Blinking	Bus data is receiving
	OFF	No data is receiving

3.3 Configuring Switch/Button

3.3.1 Status Setting Switch

Configuration switch is located at the bottom of product, bit 1 is the debugging bit and bit 2 is the configuration bit.

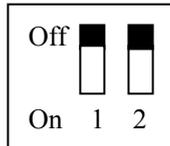

The debugging (bit 1)	Configuration (bit 2)	Description
Off	Off	Run mode
Off	On	Configuration Mode
On	Off	Debug mode
On	On	Configuration Mode

Note: ①After configuring the switch, you have to restart the GT200-HT-DP to make the settings take effect! (Power off then Power On)

②Set to debug mode, “Modbus slave” or “Universal mode” will be compulsory to appoint RS485 interface acting as the communication port and RS232 interface acting as debugging interface.


③ Configuration interface uses the RS232 interface.

3.3.2 PROFIBUS DP/ Modbus Address Setting Button


Under normal working condition of the GT200-HT-DP, press the button twice quickly, then the high bit of digital LED starts to flash, click the button to set the high bit of PROFIBUS/Modbus address. Then keep pressing the button for about 3 seconds, the low bit of digital tube starts to flash, click the button to set the low bit of PROFIBUS/Modbus address. Finally, keep pressing the button for about 3 seconds, the address flashing three times indicates that the address was set successfully. After entering into the status of setting PROFIBUS/Modbus address, if no button action within ten seconds, GT200-HT-DP exits the status of setting address automatically and continues to display the original address. The settable range of PROFIBUS/ Modbus address is 0 to 99 (decimal).

3.3.3 Internal / External Sampling Resistor Switch

Users can choose to use the internal sampling resistor or external sampling resistor to get the HART signal. The specification of the internal resistor is 270Ω , 2W. When the power of the sampling resistor is more than 2W, you must choose to use external resistance.

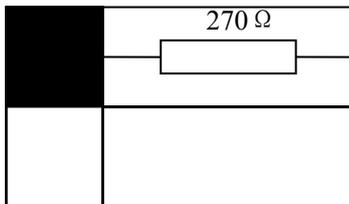


Switch to the top, using the internal sampling resistor

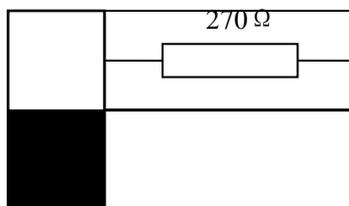

Switch to the bottom, using the external sampling resistor


3.4 Interface

3.4.1 Power Interface

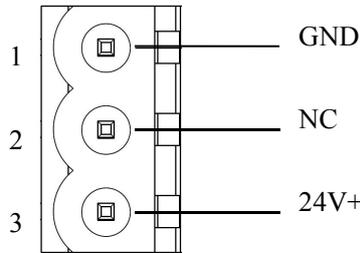

Pin	Function
1	Power GND
2	NC(Not Connected)
3	24V+, DC Positive 24V

3.4.2 PROFIBUS DP interface

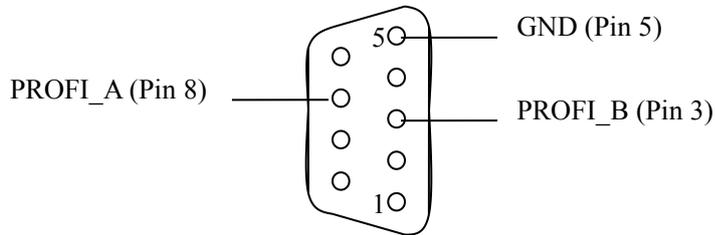

PROFIBUS DP interface uses DB9 connector, and the pins are defined as follows:

Pin	Function
3	PROFI_B, Data positive
5	GND
8	PROFI_A, Data negative

3.4.3 RS485/RS422 Interface

The RS-485/422 interface of GT200-HT-DP is a standard port, and the characteristics of the product will be described as follows:

3.4.3.1. The basic characteristics of RS-485 transmission technology


- ① Network topology: Linear bus, there are active bus terminal resistors at both sides.
- ② Transfer rate: 1200 bps~115.2Kbps.
- ③ Media: Shielded twisted-pair cable and also can cancel the shielding, depending on environmental conditions (EMC).
- ④ Site number: 32 stations per subsection (without repeater), and can increase to 127 stations (with repeater).
- ⑤ Plug connection: 3/5-pin pluggable terminal.

3.4.3.2. The main points on the installation of RS-485 transmission equipment

- ① All the devices are connected to the RS-485 bus;
- ② Each subsection can be connected up to 32 sites;
- ③ The two farthest end of each bus provides a termination resistor—120Ω 1/2W to ensure reliable operation of the network.

Serial interface uses 5-pin pluggable open terminal and users can wire it according to the wiring instructions on the panel.

5-pin terminal:

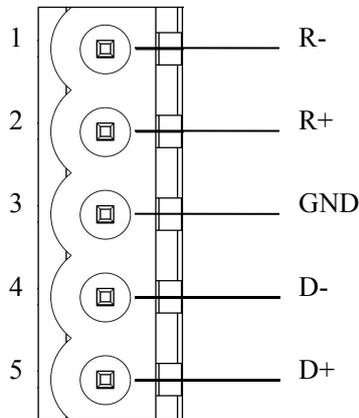


Pin	Function
1	R-, RS-422 Receive Negative
2	R+, RS-422 Receive Positive
3	GND
4	D-, RS-485/RS-422 Transmit Negative
5	D+, RS-485/RS-422 Transmit Positive

When you use 2-wire RS485, just connects Pin D+ and D-. If you use 4-wire RS485 or RS422, connects D+/D- to TX+/TX-.


3.4.4 RS-232 Interface

RS-232 interface of GT200-HT-DP uses 3-pin pluggable open terminal, and its pin description is shown as follows:

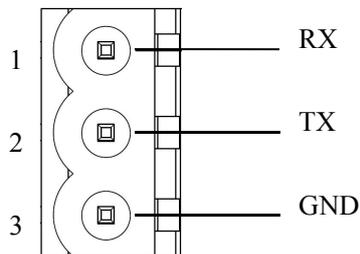

Pin	Function
1	RX, Connect user device RS232's RX
2	TX, Connect user device RS232's TX
3	GND, Connect user device RS232's GND

3.4.5 HART Interface

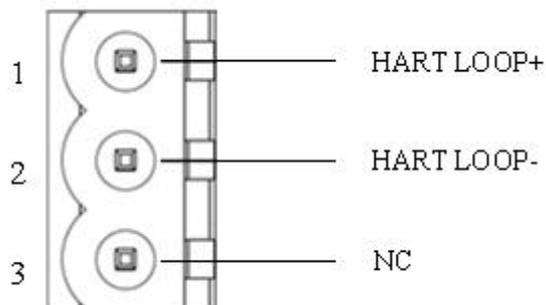


GT200-HT-DP HART to PROFIBUS DP/MODBUS Gateway

User Manual


Pin	Function
1	Connect HART signal positive
2	Connect HART signal negative
3	NC

3.5 Topology of GT200-HT-DP and Fieldbus Devices

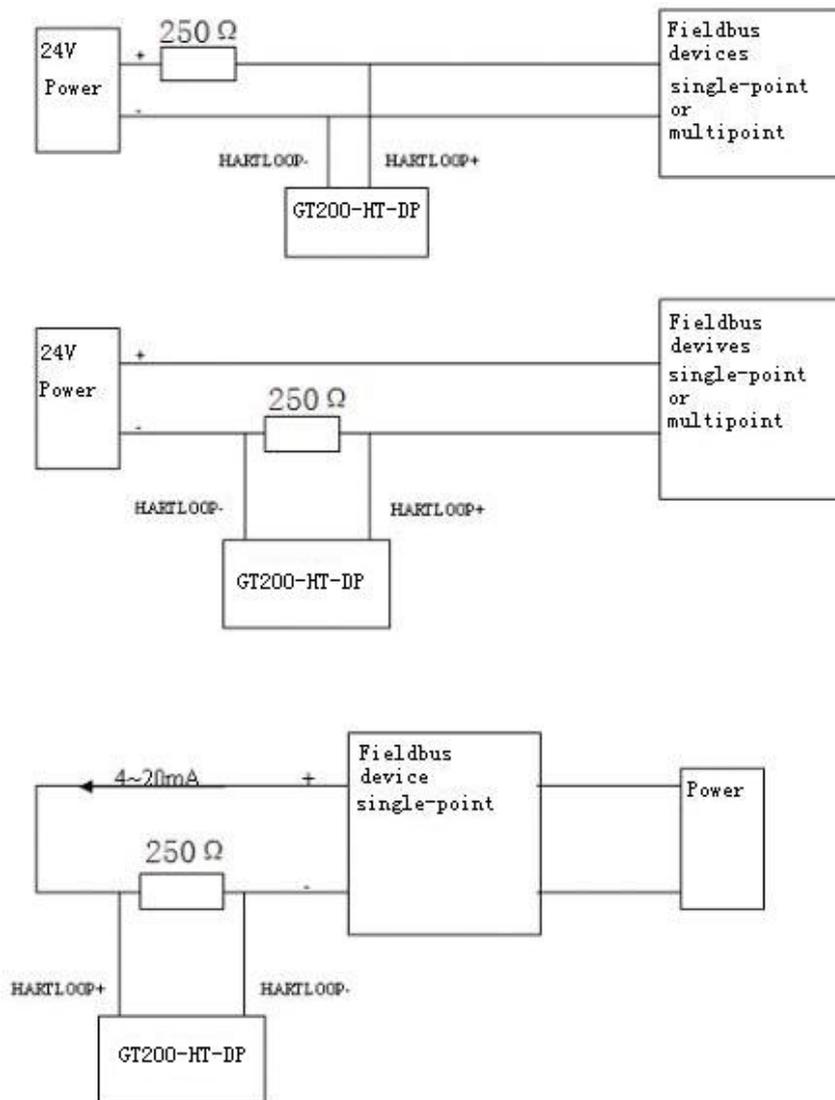

Not using the internal resistor!

These diagrams show outside sampling resistor used and the system wiring. Use internal sampling resistor just to replace the 250ohm to internal resistor. You must select one from using internal sampling resistor or external resistor otherwise the HART will not work.

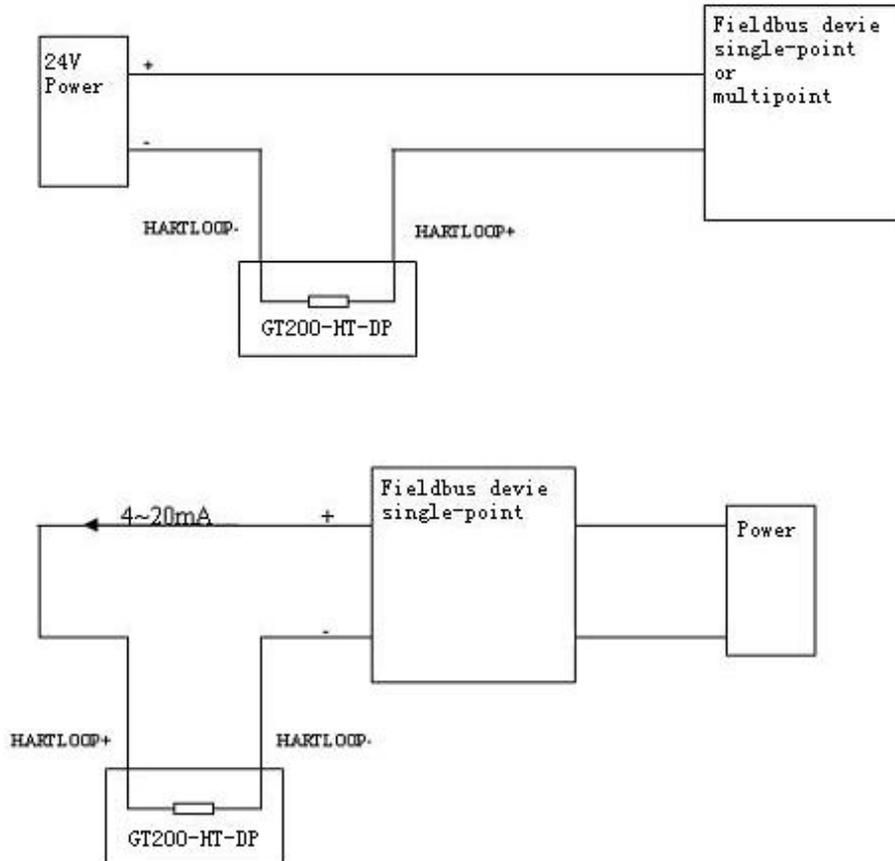

Using the internal resistor!

Note: 1. Some HART slave instrument need to perform self-test and other internal work when power is on, it may not start HART communication, so gateway cannot receive the response data of the instrument right now. It is recommended the HART slave instrument and gateway uses separate power supply so that the gateway can immediately establish communication with instrument.

2. When configuring HART commands with SST-HT-CFG, the commands need to be configured according to the actual demands. To improve the speed of bus communication, it is recommended not to configure the empty node (node is not really connected) and empty commands (the actual unnecessary commands).

4 Software Instructions


4.1 Software Interface Description

SST-HT-CFG is configuring software based on Windows platform, and used to configure HART series products.

The following describes how to use the software SST-HT-CFG and configure the GT200-HT-DP. You may also read the software user manual to get more detailed information.



Double-click on the icon **SST-HT-CFG** to enter the main interface of software:

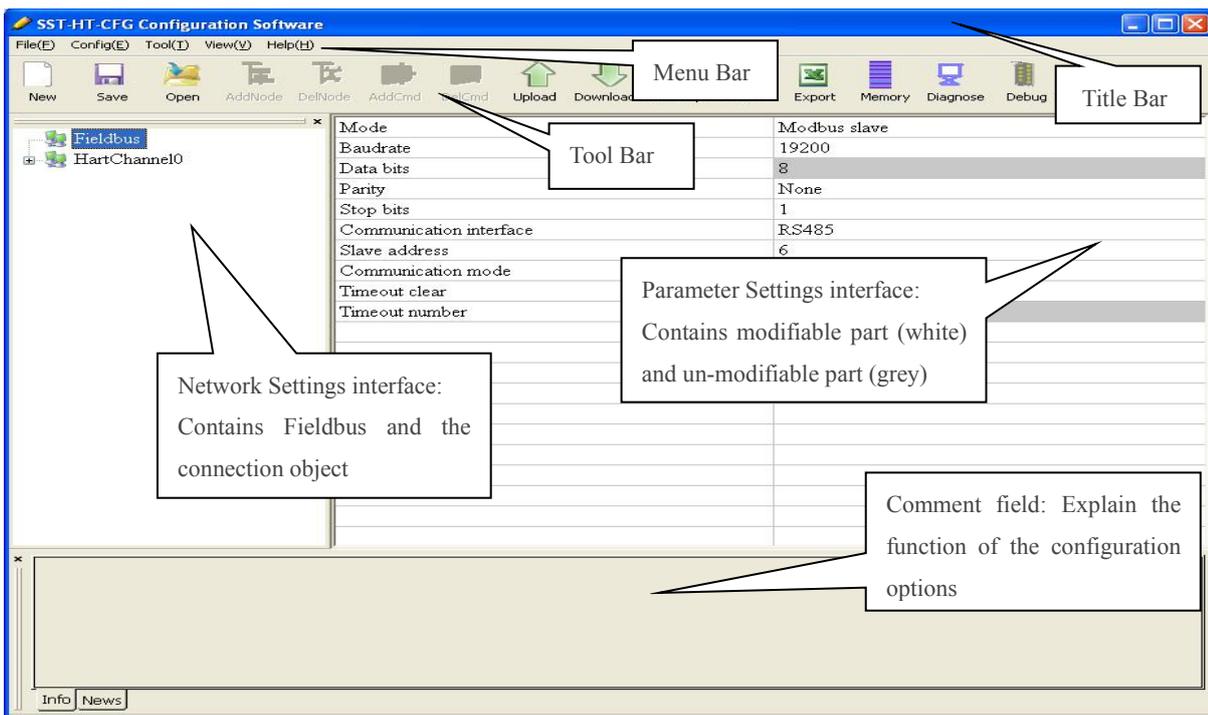

Tool Bar:

Toolbar interface shown as follow:



The function from left to right is: New, Save, Open, AddNode, DelNode, AddCmd, DelCmd, Upload, Download, AutoMap, Conflict, Export, Memory, Diagnose, Debug,

GT200-HT-DP HART to PROFIBUS DP/MODBUS Gateway User Manual

Download, AutoMap, Conflict, Export, Memory, Diagnose and Debug.



New: Create a new configuration file



Save: Save the configuration file



Open: Open the configuration file



AddNode: Add a HART slave node



DelNode: Delete a HART slave node



AddCmd: Add a HART command



DelCmd: Delete a HART command



Upload: Read the configuration information from the module and shown in the software



Download: Download the configuration file to the module



AutoMap: Used to automatically calculate the mapped memory address with no confliction by each

command




Conflict: To check whether there are conflicts with configured commands in the gateway memory data

buffer



Export: Output current configuration to the local hard disk and saved as Excel spreadsheet form



Memory: Show the internal data exchange of the gateway



Diagnose: Analyze operating condition of fieldbus device; also it can finish some certain analysis



Debug: Send any request frame to Hart fieldbus and show the response information received in HART,

convenient to debugging.

4.2 Software Functional Specifications


4.2.1 Connect with the Hardware

Put the DIP switch of the gateway to “ON”, use a serial port line to connect the gateway’s RS232 port and one of computer and power on the gateway. Its Digital tube which displays “CF” indicates it is in the state of configuration.

4.2.2 Upload Configuration



Open the software “SST-HT-CFG”, click on the icon  firstly, select the computer port connected to the gateway and then click “upload data”. If it shows “upload successfully”, it indicates that configuration file had been uploaded to the SST-HT-CFG.

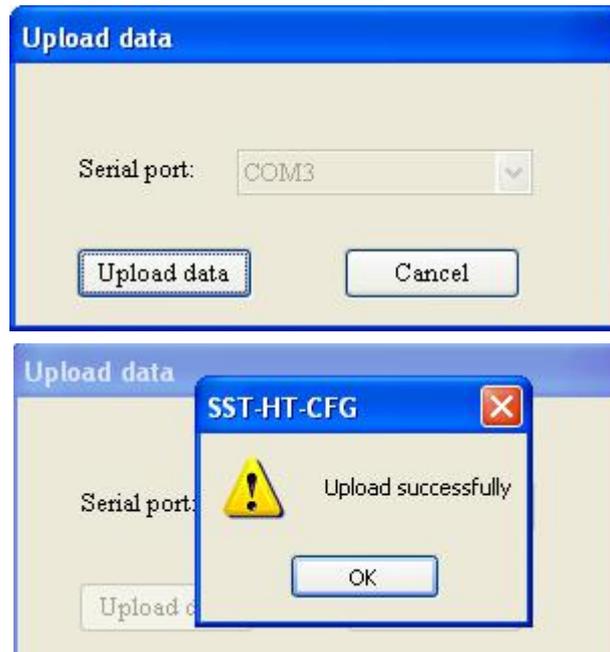


4.2.3 Configure Fieldbus

4.2.3.1 Configure the fieldbus as Modbus slave

If you want to use the functionality of Modbus slave, click the “Fieldbus” in the tree view, select mode as “Modbus slave” in the right configuration plate, and then press ENTER to confirm, you will see the interface as below:

GT200-HT-DP HART to PROFIBUS DP/MODBUS Gateway User Manual

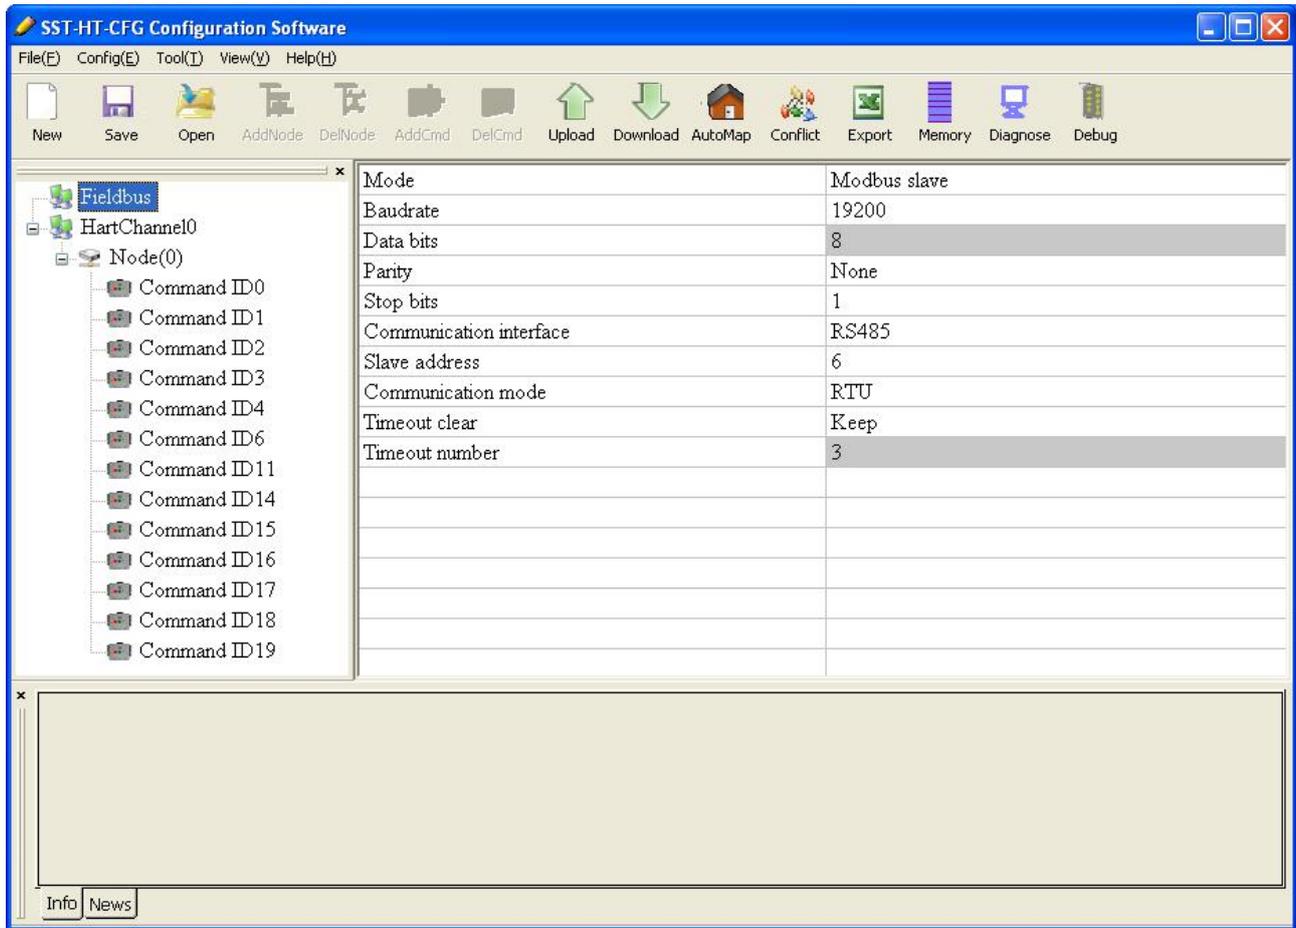

In this interface you can set the parameters of slave:

Baud rate: 300, 600, 1200, 2400, 9600, 19200, 38400, 57600, 115200bps

Data bits: 8

Parity: None, Odd, Even, Mark, Space optional

Stop bits: 1, 2

Communication mode: RTU, ACSII

Slave address: 0~247

Communication interface: RS485, RS232 optional. When the serial need to communicate with RS422, please choose "RS485"


Input data timeout clear/Keep: When the HART commands exceed the no-reply times, whether or not to clear the HART input data buffer.

Timeout number: set the timeout/clear times

4.2.3.2 Configure the fieldbus as universal mode

The universal mode (transparent transmission mode) means that we can send HART frame directly through serial port (RS232/RS485/RS422), meantime gateway also will send out the data received from HART bus through serial port. In this process, the data don't change.

Click the "Fieldbus" in the tree view, select mode "Universal mode" in the right configuration plate, and then press ENTER to confirm, you will see the interface as below:

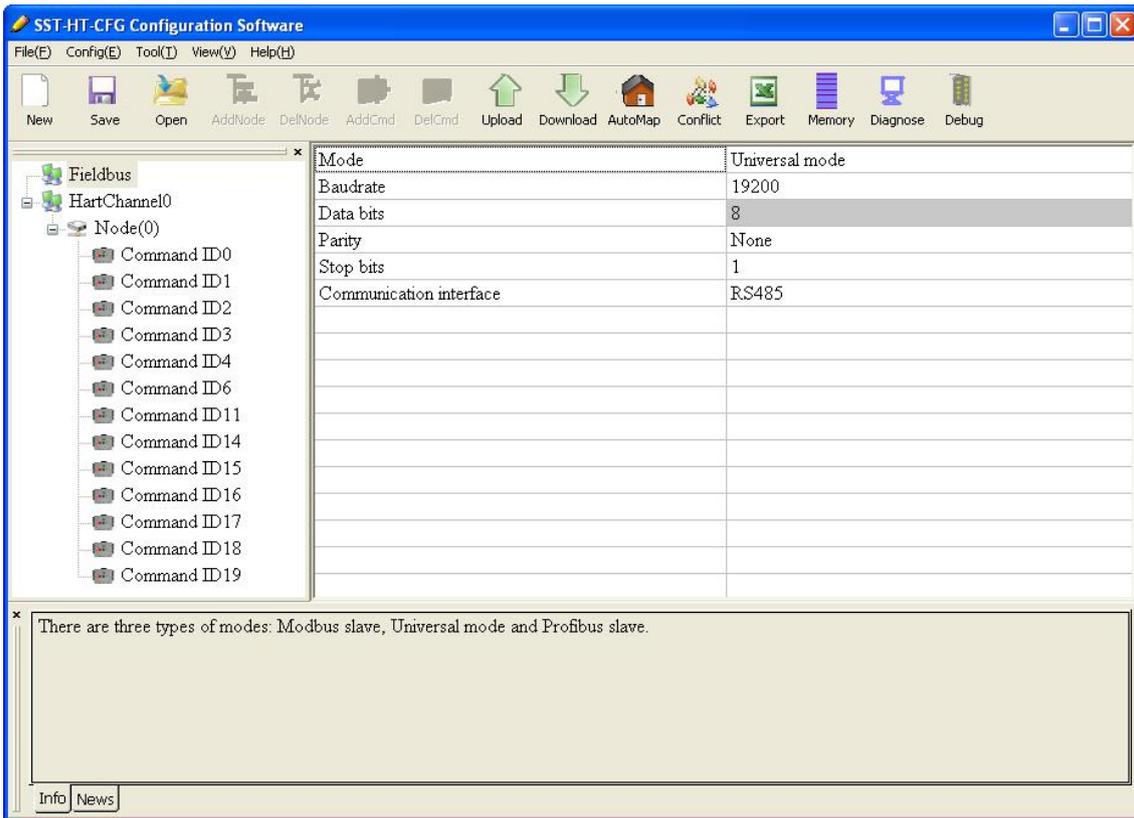


The range and meaning of general mode are the same as "Modbus Slave".

4.2.3.3 Configure the fieldbus as PROFIBUS slave

Click the "Fieldbus" in the tree view, select mode "PROFIBUS slave" in the right configuration plate, and then press ENTER to confirm, you will see the interface as below:

GT200-HT-DP HART to PROFIBUS DP/MODBUS Gateway User Manual

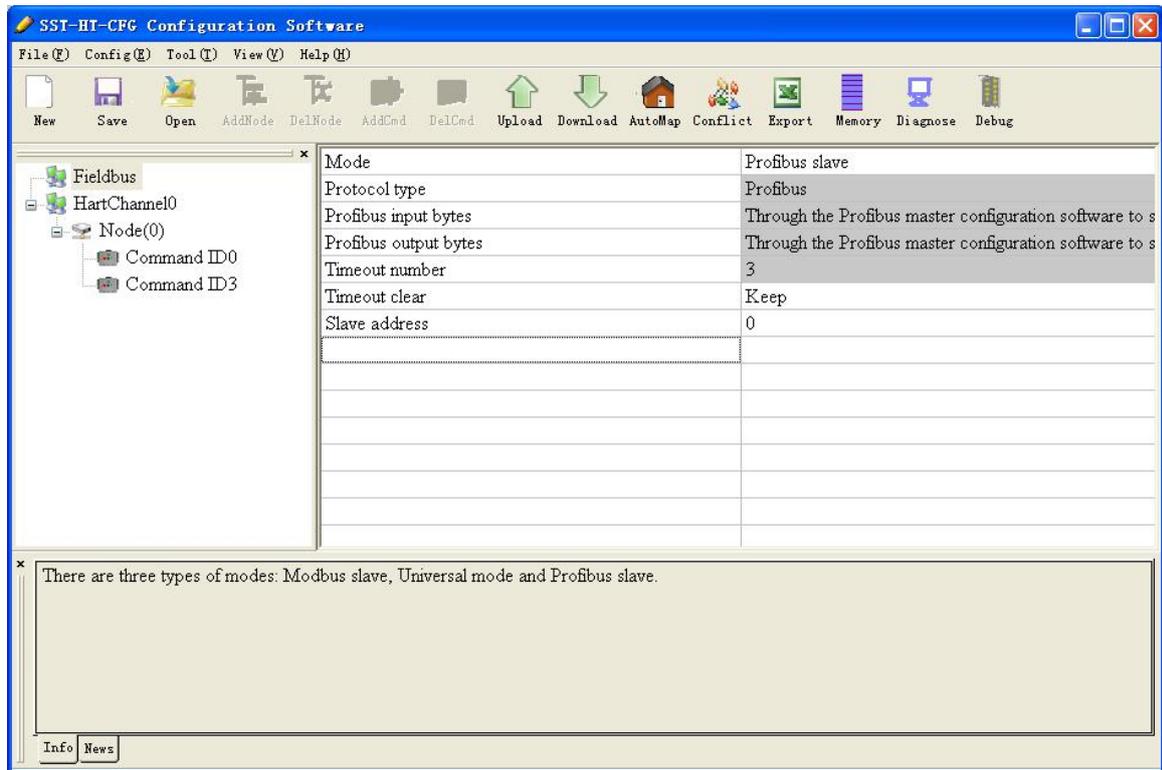

Numbers of input bytes: setting through the modeling software of PROFIBUS master, it can't be changed;

Numbers of output bytes: setting by the configuration software of PROFIBUS master, it can't be changed;

Timeout clear/keep of input data: the meaning is the same as "Modbus slave";


Slave address: PROFIBUS DP slave address (When the gateway works properly, the address can be changed by the configuring button)

4.2.4 Configure the HART Fieldbus

4.2.4.1 Set the Parameters of HART Channel

Click the HartChannel0 in the tree view, in the right place will show the configuration plate:

GT200-HT-DP HART to PROFIBUS DP/MODBUS Gateway User Manual

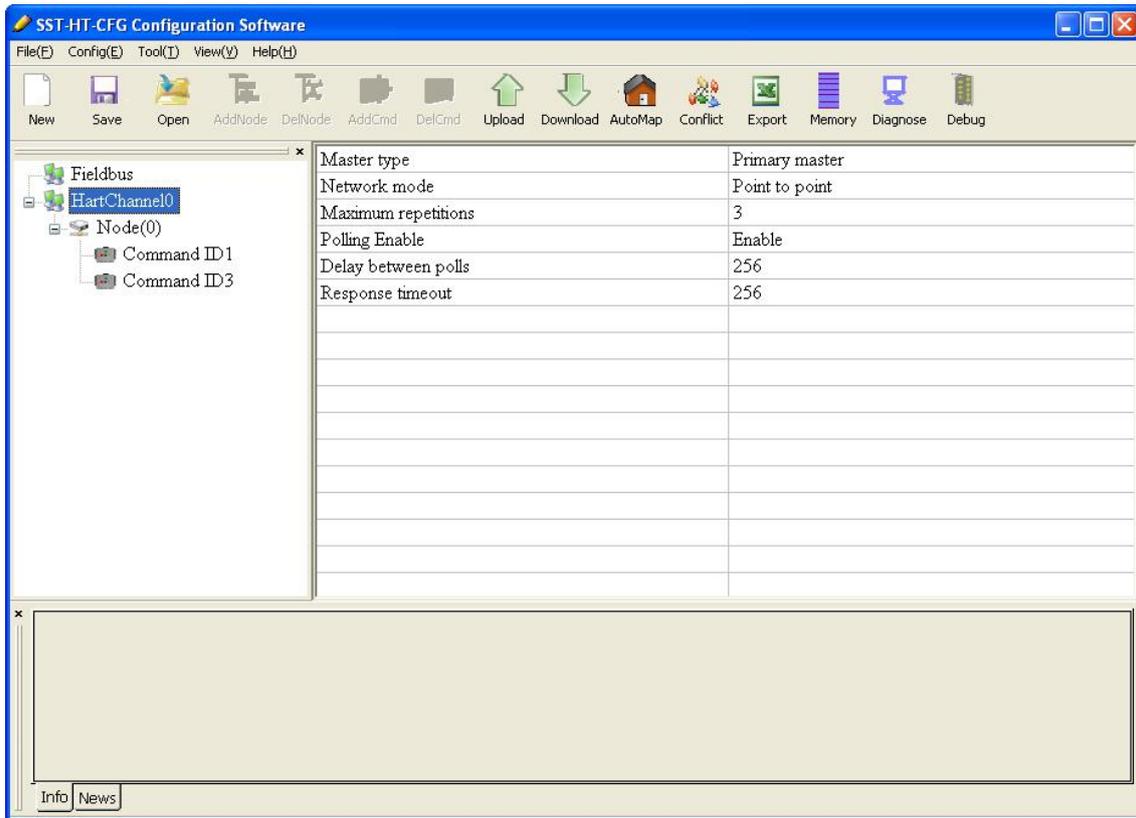

Master type: Primary master, Secondary master

Network mode: Select the networks link as single or multiple points, in the single point the gateway can only communicate with the slave device whose address is 0

Maximum repetitions: Select the timeout numbers, range is 0~5

Polling Enable: Whether to use polling function, “Enable” means to use polling function


Polling circle time: Set the polling circle time (time interval between starting to send one order and starting to send next order, ranged in 500~65535ms;

Response waiting time: Set the maximum time gateway wait to response from slave, ranged in 256~65535ms


4.2.4.2 Add Nodes

Select “HartChannel0”, Right click the mouse and click “Add Node” in the pop-up menu.

GT200-HT-DP HART to PROFIBUS DP/MODBUS Gateway User Manual

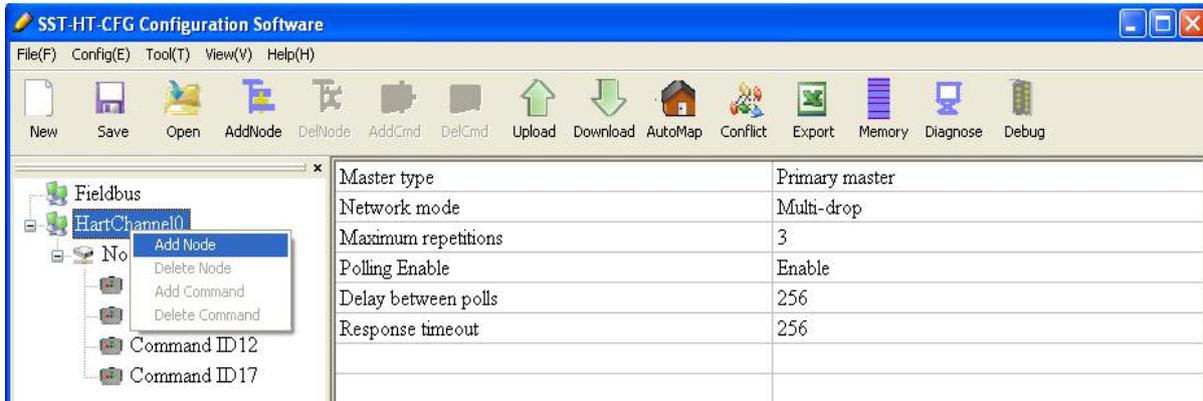

Click the added node, set slave address in the right configuration plate, and please notice that HART channel can only be equipped with one slave node when configured in the single point mode.

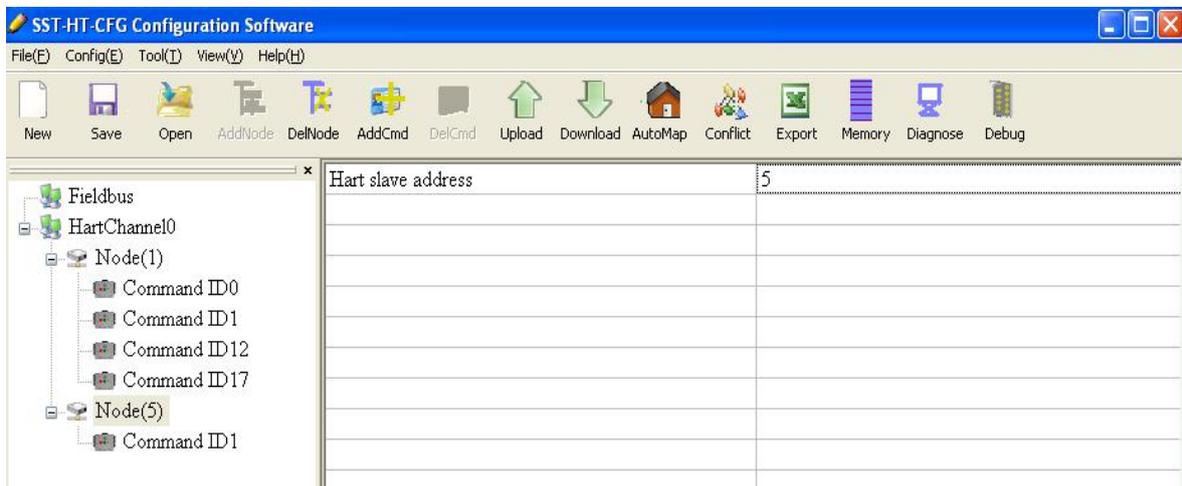


Note: When configured node numbers are more than the actual connected devices, the redundant node will lead to the longer time of polling circle; so, it is recommended that configured node numbers should be the same as actual devices.

4.2.4.3 Add HART Commands

Select the “Node ()”, Right click the mouse and click “Add Command”



Choose the command you want in the popup menu, and then click “OK” to exit:

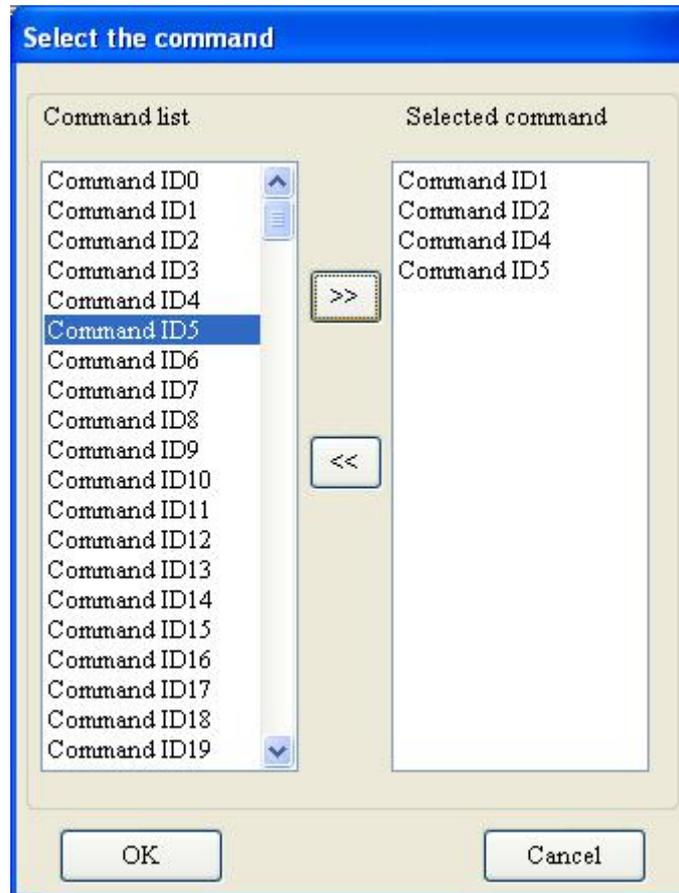


Note: the same command can only be configured once in one node.

4.2.4.4 Configure HART Commands

Click the command number in the tree view; you will see the configuration plate in the right place:

GT200-HT-DP HART to PROFIBUS DP/MODBUS Gateway User Manual

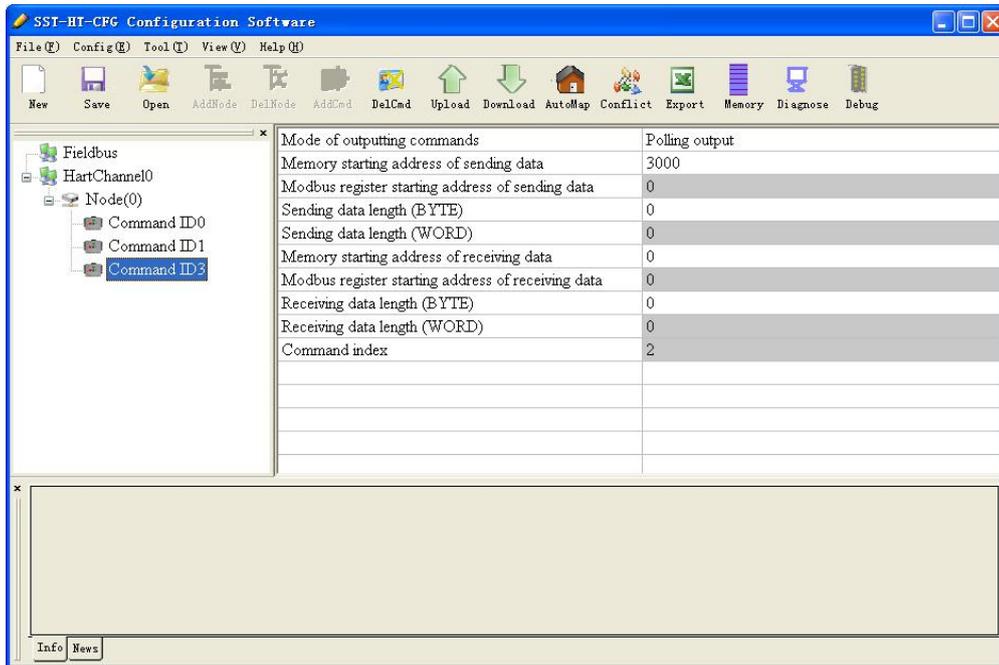

Mode of outputting command: You can use the execution way of the command, change-of-state, polling output, Initialization output and disable output are optional;

- Change-of-state output: Execute this command once s data buffer of HART changes
- Polling output: This order is put in the polling list, executed periodically
- Initialization output: Execute the command only once when power is on
- Disable output: the command will not generate output data.

Set starting address of sending data: 3000~3999

Modbus register starting address of sending data: 0~499

Sending data length (BYTE): 0~255

Sending data length (WORD): 0~127

Memory starting address of receiving data: 0~1599

Modbus register starting address of receiving data: 0~799

Receiving data length (BYTE): 0~255

Receiving data length (WORD): 0~127

Command index: The index of the command in the configured commands list

4.2.4.5 Delete Commands

Select the command needed to be deleted, right click the mouse and click “Delete Command”. Through the menu command you can execute the same action.

4.2.4.6 Delete Nodes


Select the node needed to be deleted, right click the mouse and click “Delete Node”. Through the menu command you can execute the same action.

4.2.5 Conflict Detection

The conflict detection function can view the usage of input/output data in the memory.

Configuration interface as shown below:

The left side is configuration commands, the right side is data memory address including receive data storage address and send data storage. Upper side is memory distribution of the HART’s sending data; lower side is memory distribution of the HART’s receiving data. When one memory unit is occupied by two commands or more, the memory unit will display red color. When the distributed memory exceeds the defined scale of gateway, the exceeding part will display yellow color. White color area shows the usable memory. Green color area indicates occupied memory. Clicking one command, the distribution chart shown in blue will show the storage location of input/output data S

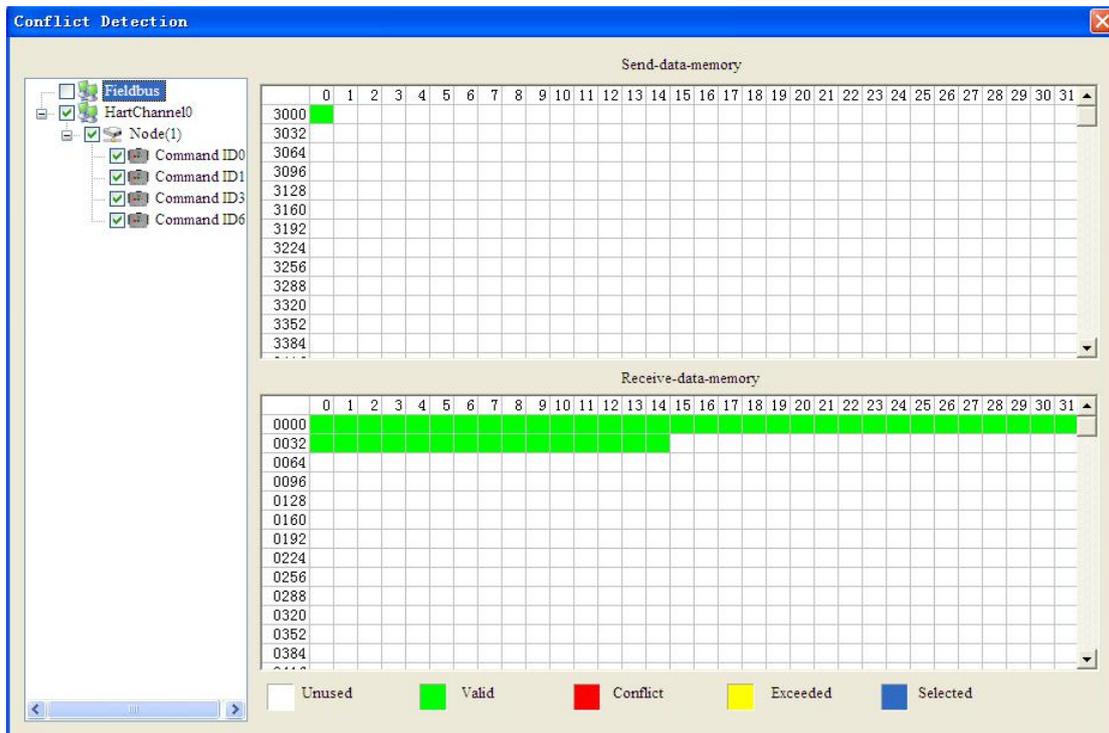

4.2.6 AutoMap

Automap will automatically distribute the memory with no conflict according to the input/output bytes number by users' commands.



You should set the correct input/output bytes for each commands, then click **AutoMap** label, select “yes” in the



popup menu.

4.2.7 Download Configuration



Click the icon **Download**; it will download the configuration into the gateway. Before downloading the file, please

check that whether all the configuration parameters are right or not.


4.2.8 Memory

It shows the data exchange inside of the gateway, users can use this function to debug the HART fieldbus in the absence of the PROFIBUS or Modbus master station. Steps are as follows:

- 1) Firstly put the debugging DIP switch to “ON”, then regain the power. Now, GT200-HT-DP is in the debugging mode.
- 2) Use a serial port line to connect the gateway’s RS232 port and computer RS232 serial port, open the software “SST-HT-CFG”, click “Config—serial setting”, Select the correct serial port



- 3) Click “Tool—Show Memory Data” or click on the icon , Interface is as follows:

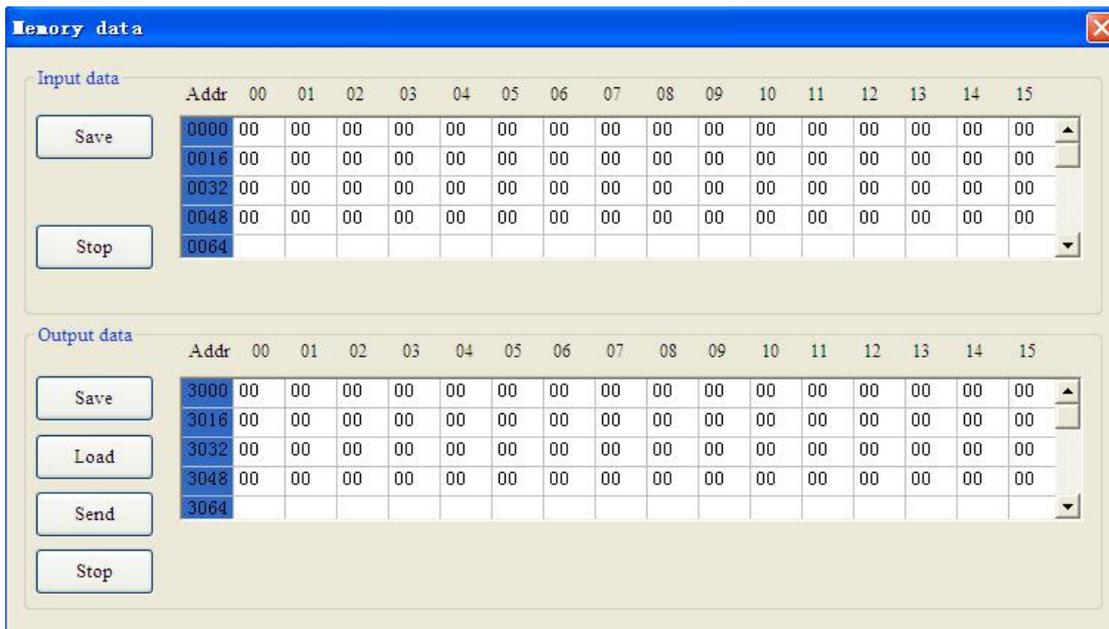

As is shown in the table, upper table shows the memory distribution of HART input data, lower table shows the output data. When you need to change the output data, click the “stop” button firstly, then change the related data or load the already saved data table, at last, click the “sending data”.


4.2.9 Diagnose

Through this function users will know which device is not communicating, execution condition of configured commands, data transmit of gateway and displaying of certain command, operating steps are as follows:

1. Ensure that the gateway's debug switch is in the ON state, and then regain the power; GT200-HT-DP is in the debugging mode.
2. Use a serial port line connected to the gateway's RS232 port and computer RS232 serial port, Open the software "SST-HT-CFG", Click "Config—serial setting", Select the correct serial port



3. Click "Tool—Diagnose" or click on the icon , Interface is as follows:

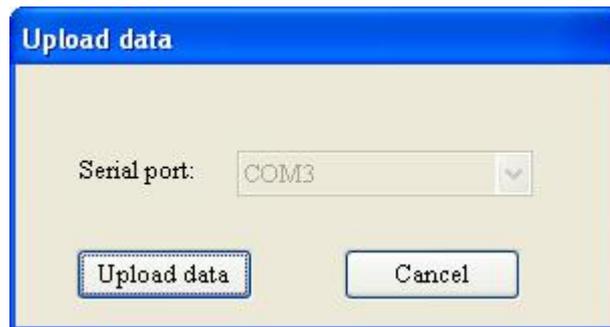


4. click "upload data" will see a picture as below



5. Press "confirm" button to get in the interface of diagnosis

Double click “CMD19” will show the window as below:

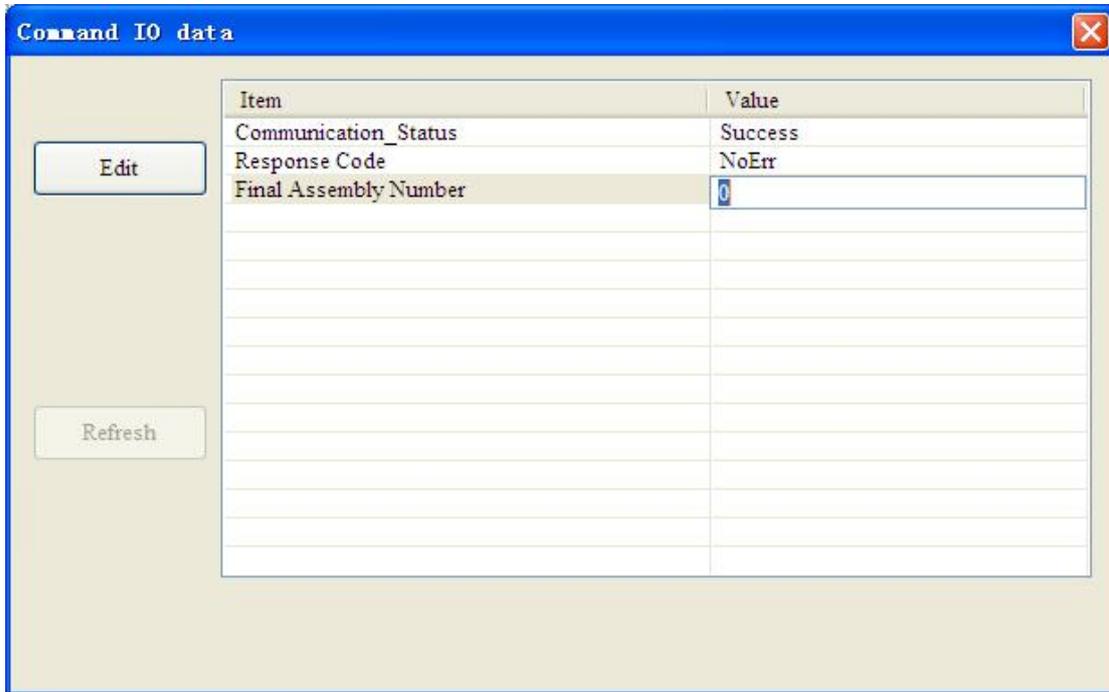

Click the value or attribute you want to change, like “Final Assembly Number”, change relevant values, and click “Modify” can execute this operation of write command.


4.2.10 Serial Debug

Through this function you could send any request message to Hart fieldbus and monitor the data that are received in HART fieldbus, concrete operations are as follows:


- 1) Firstly put the gateway’s debug DIP switch to “ON” state and power on again. Now, GT200-HT-DP is in the debugging mode.
- 2) Connect the RS232 interface of GT200-HT-DP with computer and open the software “SST-HT-CFG”; click “Config—serial setting” and select the correct serial port.

- 3) Click “Tool—Serial debugging assistant” or click on the icon , it will pop the serial debugging assistant interface::

GT200-HT-DP HART to PROFIBUS DP/MODBUS Gateway User Manual

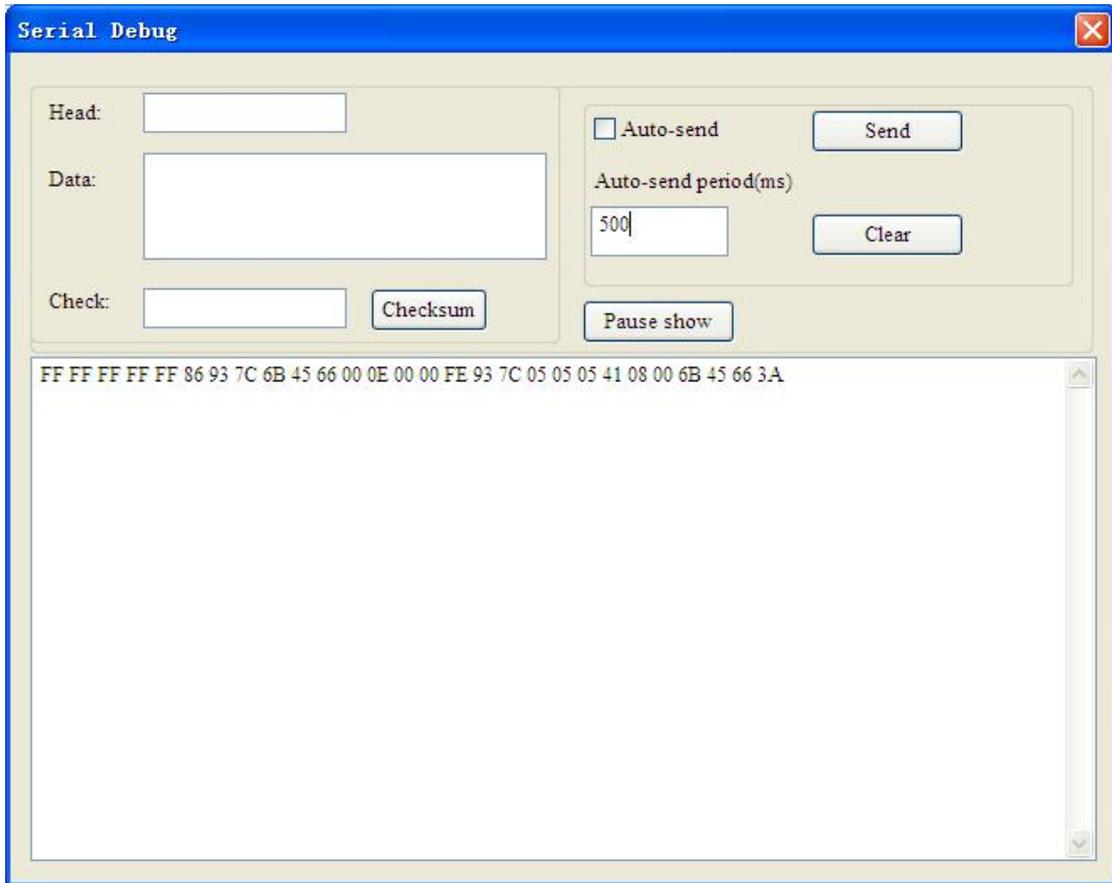

In this interface, click “Auto-send” or “Send” will combine data head, data, and check code into one frame and send out it. The data that the gateway received from HART fieldbus will be shown in the blank place below. The “Checksum” button only checks part of the data. Here is an example:


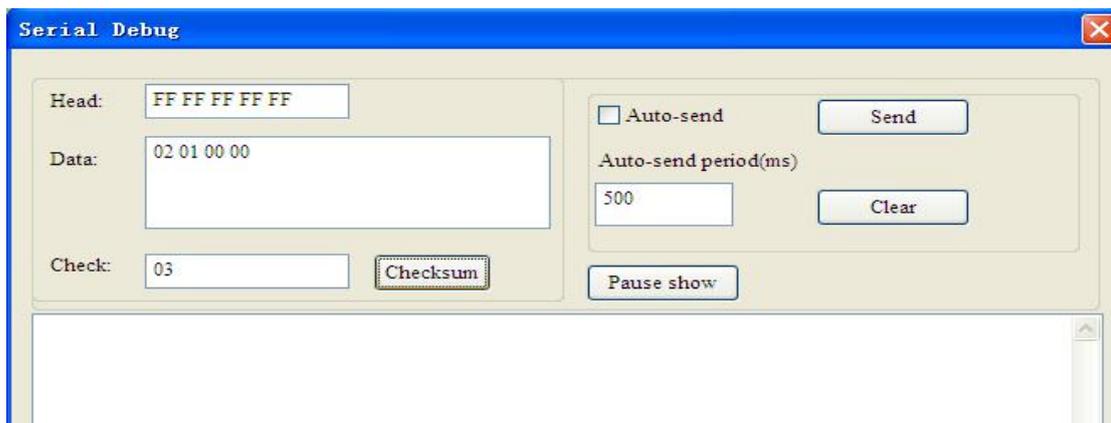


In this example, command 0 is composed of data head, data and check code. It uses short address; when you click “Send”, you will get the response data.

Note: Under this function, gateway will stop to execute the configured command; Turn off this function, gateway will return to execute the configured command.

4.2.11 Switching Tools

In the “Tools” menu, there are two practical tools. They are used to switch between IEEE754 and PACKED ASCII conveniently.

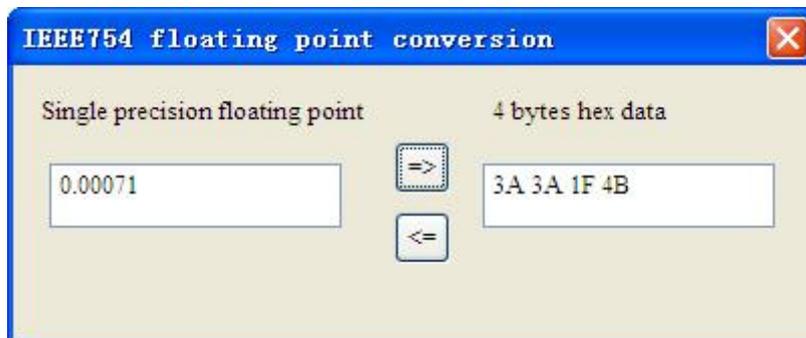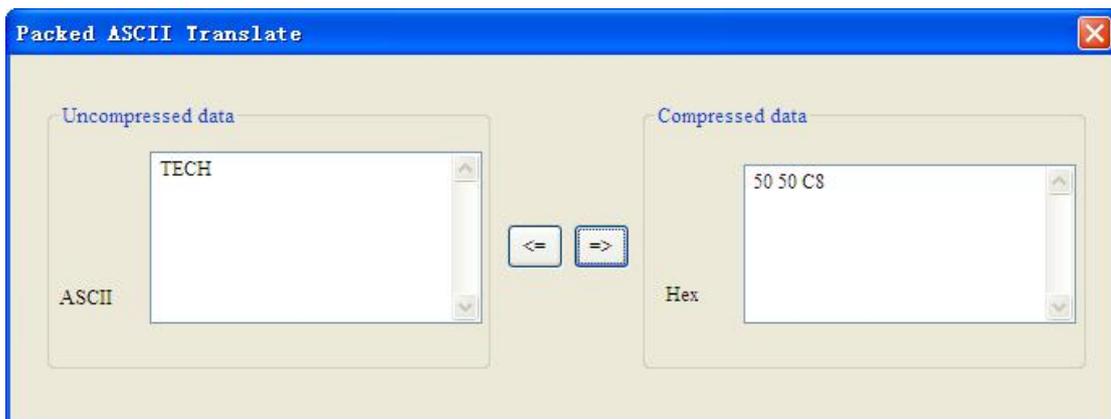



5 Working Principle

The interior of the gateway opens up a memory block of 5000 bytes, and these 5000 bytes are considered as input and output buffers of data exchange area. Among them 0 ~ 2999 memory area acts as the storage area of the HART input data and device status. 3000 ~ 4999 memory area acts as the storage area of HART output data and control variables. The specific assignment is shown in the table below:

	Gateway memory address	Corresponding register address	Corresponding PROFIBUS input and output buffers	Description
Read-only part	0-1599	0-799	Address 0-243 corresponds input buffer area of PROFIBUS	The HART data input area
	1600-1619	800-809	No meaning to PROFIBUS	Device 0_cmd0 data
	1620-1639	810-819		Device 1_cmd0 data
Device 15_cmd0 data
	1920	960H		Gateway status
	1921	960L		Gateway HART port send times
	1922	961H		Gateway HART port receive times
	1923	961L		HART communication error times
	1924-1943	962-971		Reserved
	1944	972H		Device 0_cmd0's response status
	1945	972L		Device 1_cmd0's response status
Device15_cmd0's response status
	1960-2119	980-1059		The response status of the user command
	2120-2391	1060-1195		Reserved
	2392	1196H		Universal receiving label
	2393	1196L		Universal receiving Error Counter
	2394-2395	1197		Universal receiving data length
	2396-2695	1198-1347		Universal receiving data
	2696-2999			Reserved

GT200-HT-DP HART to PROFIBUS DP/MODBUS Gateway User Manual


Readable and writable part	3000-3999	0000-0499	Address 3000~3243 corresponds PROFIBUS output buffer	The HART data output area
	4000	0500H	No meaning to PROFIBUS	Reset to send, receive, error counter
	4001	0500L		Polling enable
	4002	0501H		Trigger label
	4003	0501L		Trigger command number
	4004-4269	0502-0634		Reserved
	4270	0635H		Universal sending label
	4271	0635L		Universal mode enabled
	4272-4273	0636		Universal sending data length
	4274-4573	0637-0786		Universal sending data

- The HART data input area: Store the data that HART slave device sends to gateway
- The HART data output area: Store data that the gateway sends to the HART slave device
- Device 0_cmd0~ Device 15_cmd0: When operating a slave command for the first time, the gateway internally will automatically execute the No.0 command to obtain the device information (to obtain the long address). The response data of these internal commands is stored in this area
- Gateway status: The gateway status indicates that what the gateway state is in the HART network, Defined as:
 - 0---- There are no HART communications
 - 1----Sending
 - 2---- Waiting for a response
 - 3---- Handling a response
- Sending times of HART port on gateway: The HART Sending counter
- Receiving times of HART port on gateway : The HART Receive counter
- HART communication error times: The HART Receive Error counter
- The response status of Device 0_cmd0~ Device 15_cmd0: Show the response status of internal commands
- The response status of user command: Show the response status of the user commands
Command status is defined:

- 0---- Not executed
- 1---- Correct response
- 2---- Parity error
- 3---- No Answer
- 4----Error defined in agreement
- 5----Not connected


- Universal receiving label: The receive label under the universal mode, this value which changes one time indicates that HART end receives a HART frame
- Universal receiving data length: Indicate the received data length in the universal mode
- Universal receiving Error Counter: Indicate the universal receiving error times
- Universal receiving data: Store the received data at HART side under the universal mode
- Reset to send, receive, error counter: Gateway's control signal; When the value of memory changes , gateway causes all counters value to 0
- Polling enable: This bit is readable and writable, writing 1 enables the polling output, writing 0 disables polling output; Reading 1 indicates that the polling state is enabled, 0 indicates that the polling is in the disabled state
- Trigger label: Changing the value will result in one trigger operation
- Trigger command number: Command number executed by trigger operation
- Universal mode enabled: The value of 1 indicates a universal transfer function is enabled, otherwise disables this function
- Universal sending label: The sending label under the universal mode, this value will lead to sending a HART frame when it changes one time
- Universal sending data length: The length of sending data under the universal mode
- Universal sending data: Data needs to send under the universal mode

5.1 Flowchart of Executing One HART Command

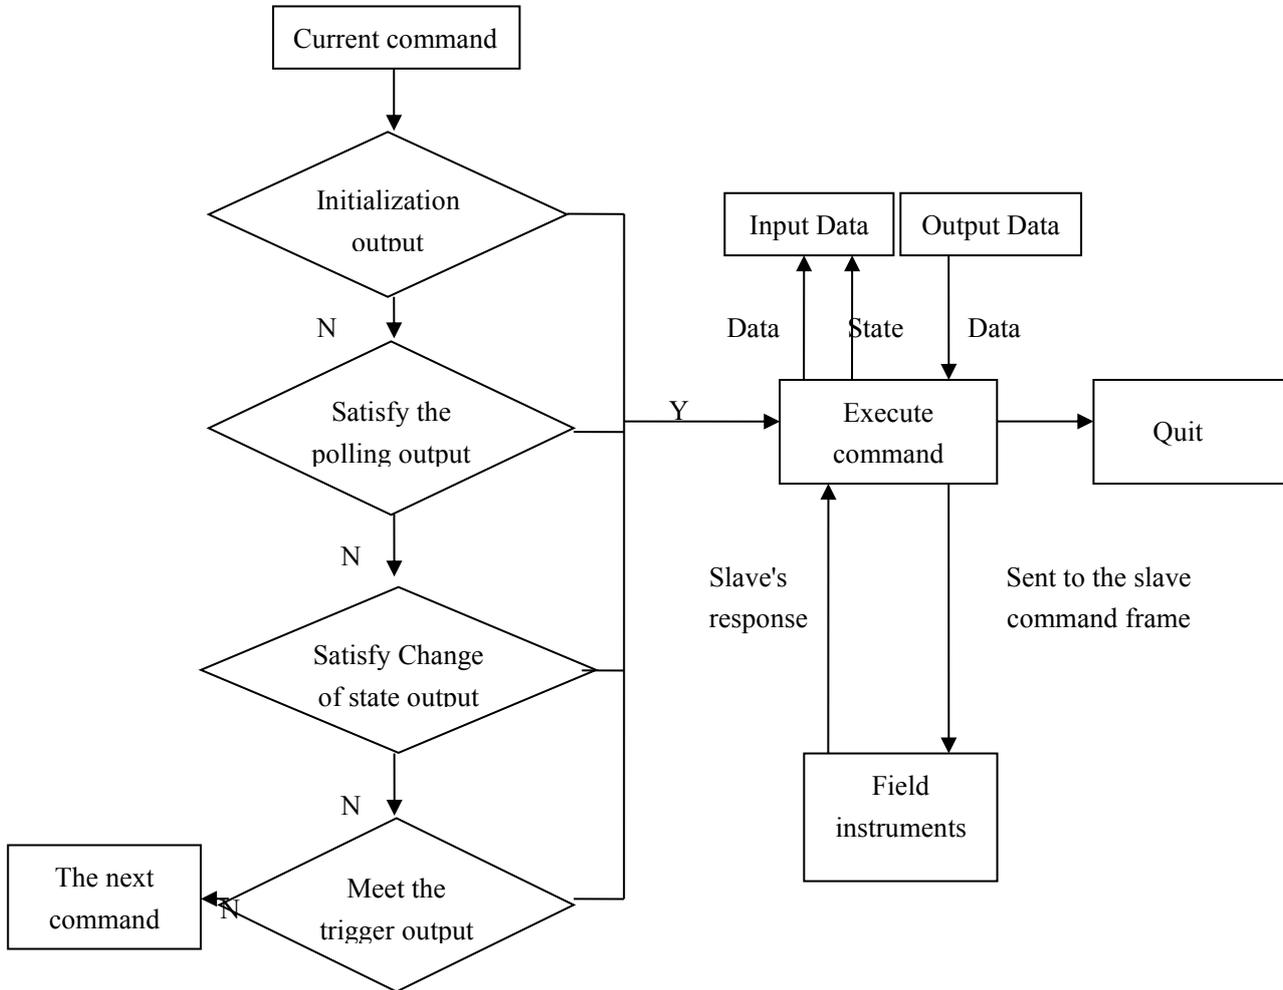

5.2 Universal Sending and Receiving Data

There are two common ways for users to select: One is that fieldbus is defined as universal mode. The gateway will receive serial data in the way of 3.5 character timeout broken frame, and send out the data unmodified from the HART interface. Gateway sends data from serial which is received from HART interface without modification. The character timeout time is determined by baud rate, such as baud rate of 19200, Character timeout time is considered to be $(1/19200) * 10 * 3.5 \approx 2\text{ms}$. The other is to start transmit-receive of HART common frame indirectly through Modbus command, here is an example:

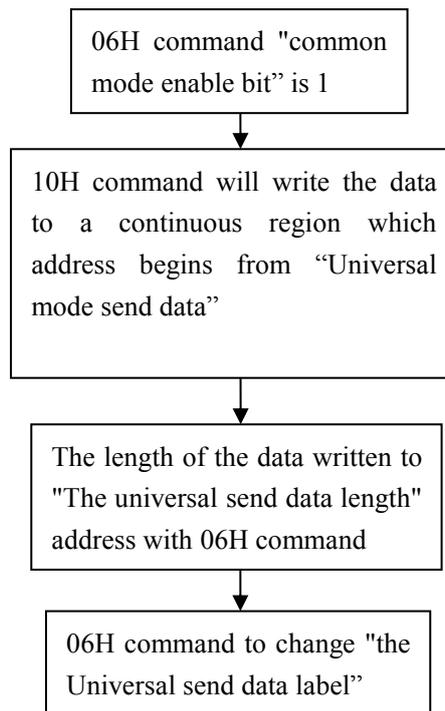

The gateway will store the received HART frame in a continuous region within "the universal receiving data" as a starting address and write the length of received data in the "Universal receiving data length". Then, change the value of universal receiving label ". If no data is received within the response waiting time, the gateway will order "universal reception error counter" to plus 1. Before sending the common frame, all users should read the universal receiving label and the error counter. After sending the common frame, it needs to read these two values continuously until one of them changes.

5.3 Trigger Command

User can use Modbus command to trigger any HART command which is configured by gateway. The specific approach is: using command ID6 of Modbus to write the user command number which needs to be triggered (when configuring commands with SST-HT-CFG, the software will automatically calculate and display it); Then rewriting "the trigger label" can trigger the value to change and trigger the gateway to finish one trigger operation; The response data block in the device will be stored to "the reception data memory" specified by this command number.

5.4 Data Exchange with PROFIBUS DP

When fieldbus is configured as “PROFIBUS slave”, the input buffer of PROFIBUS will be mapped to the memory unit began with 0 in the interior of gateway. The memory unit of the gateway starting from 3000 will be mapped to output buffer of PROFIBUS. Through GT200-HT-DP, PROFIBUS can read the field device data in the input buffer and can write the data to the field device in the output buffer. The maximum input/output bytes of PROFIBUS that GT200-HT-DP supports are 244 bytes.

5.5 Data Exchange with Modbus

When fieldbus is configured as "Modbus slave", user can exchange data, inquire about the status of gateway and manage according to the corresponding address of gateway in the internal input and output buffer; Also you can do some trigger operation and transmission of common frame.

6 In STEP7: Access Data of Gateway and Select Data Module

6.1 How STEP7 Access Data of Gateway


GT200-HT-DP provides Modules shown as follow. The maximum allowed number of modules is 64 in Step7. The maximum allowed number of input bytes is 244, the max number of output bytes is 244 and the aggregate of maximum number of input bytes and output bytes is 488.

Module	Integrity
4 Words Input, 4 Words Output	Word
8 Words Input, 8 Words Output	Word
24 Words Input, 24 Words Output	Word
56 Words Input, 56 Words Output	Word
1 Byte Input	Byte
1 Word Input	Word
2 Words Input	Word
4 Words Input	Word
8 Words Input	Word
16 Words Input	Word
32 Words Input	Word
64 Words Input	Word
2 Words Input Consistent	Length
4 Words Input Consistent	Length
8 Words Input Consistent	Length
16 Words Input Consistent	Length
1 Byte Output	Byte
1 Word Output	Word
2 Words Output	Word
4 Words Output	Word
8 Words Output	Word
16 Words Output	Word
32 Words Output	Word
64 Words Output	Word
2 Words Output Consistent	Length
4 Words Output Consistent	Length
8 Words Output Consistent	Length
16 Words Output Consistent	Length


As is shown above, the data modules which GT200-HT-DP supports include: Word integrity, Byte integrity and length integrity.

For the data modules that support Word and Byte integrity, you can use command “MOVE” to access the data during STEP7 programming.

For the data modules that support length integrity, user can take compression way to send and receive data. The compression way mainly uses “SFC 15” when sending and receiving uses “SFC 14”:

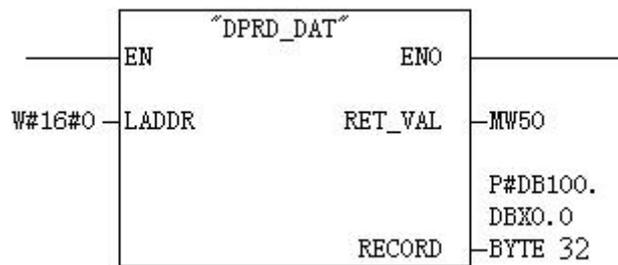

SFC14 (compressing sending)

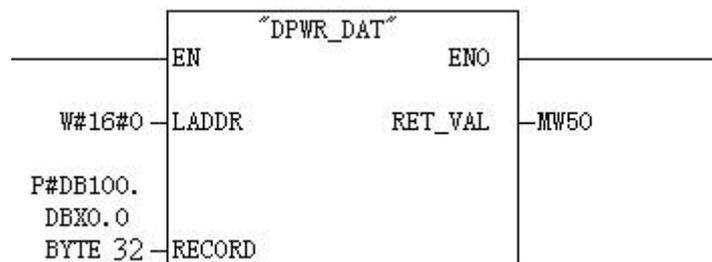

SFC15 (compressing receiving)

6.2 How STEP7 Select Data Module

Generally, when the data modules include “Consistent”, this means this data module is length integrity, Take “2 words Input Consistent” as an example, when you choose the module, you must use “SFC 14” to access the data address. When some data of Modbus slave is two-word data, and needs high accuracy and real-time, user generally select “2 words Input Consistent”, and not to select “2 words Input”. So, PLC can access the whole data module during reading data, and it can also prevent data from burst changing (last word data and next word data


are not read in the same time) and causing incorrect data.

According to user's demand of input/output bytes, there are so many alternatives for the selection of data modules. For example: When user needs 20-words input (The data number reading form Modbus slave through PLC is 20 words), user can directly select data modules no less than 20 words input (32words Input、 64words Input...) or input one input/output modules no less than 20 words (56 words Input, 56words Output...).

7 Installation

7.1 Machine Dimension


Dimension: 1.57 in (width)*4.92 in (height)*4.33 in (depth)

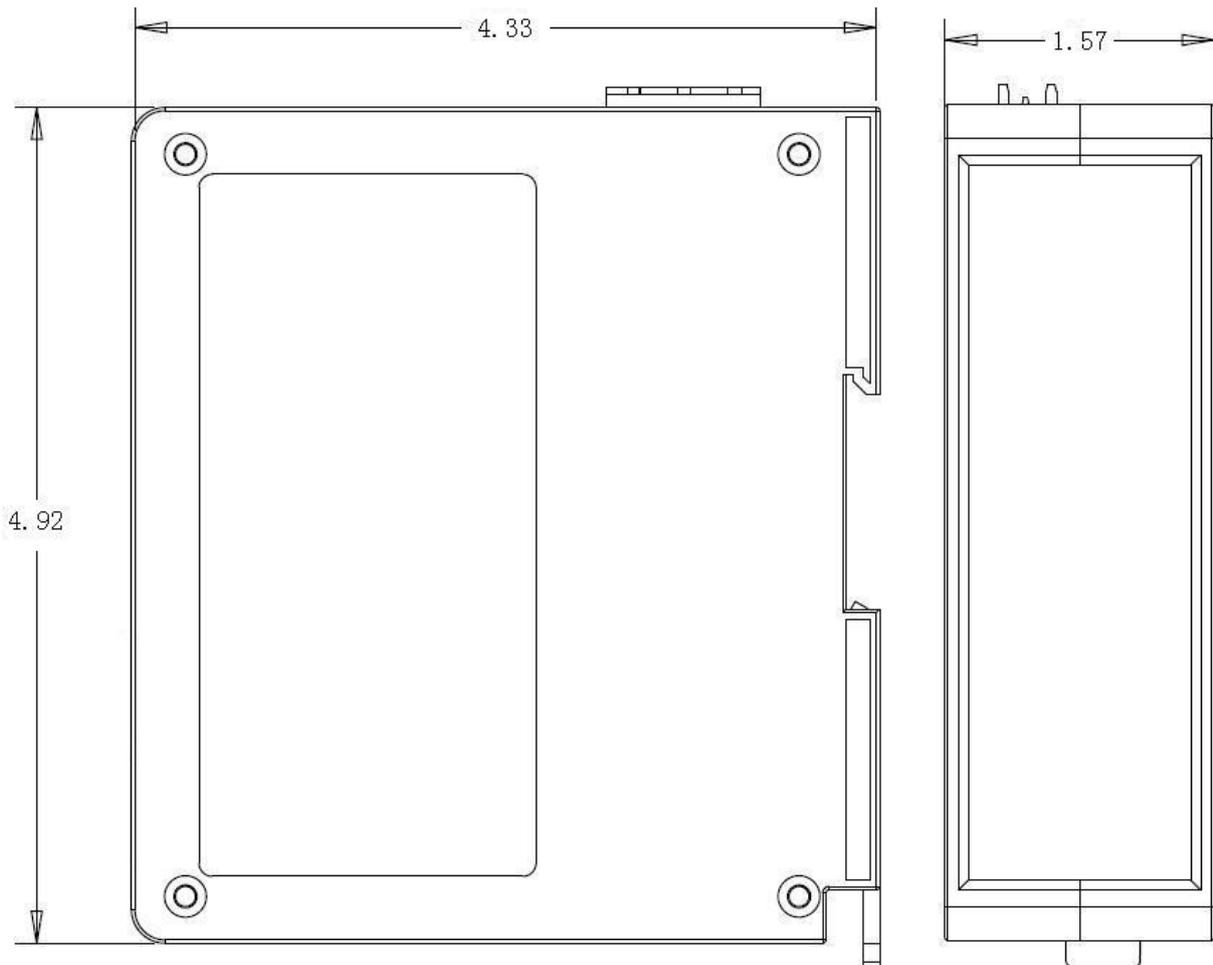

7.2 Installation Method

Using 35mm DIN RAIL INSTALLATION

Installing the gateway

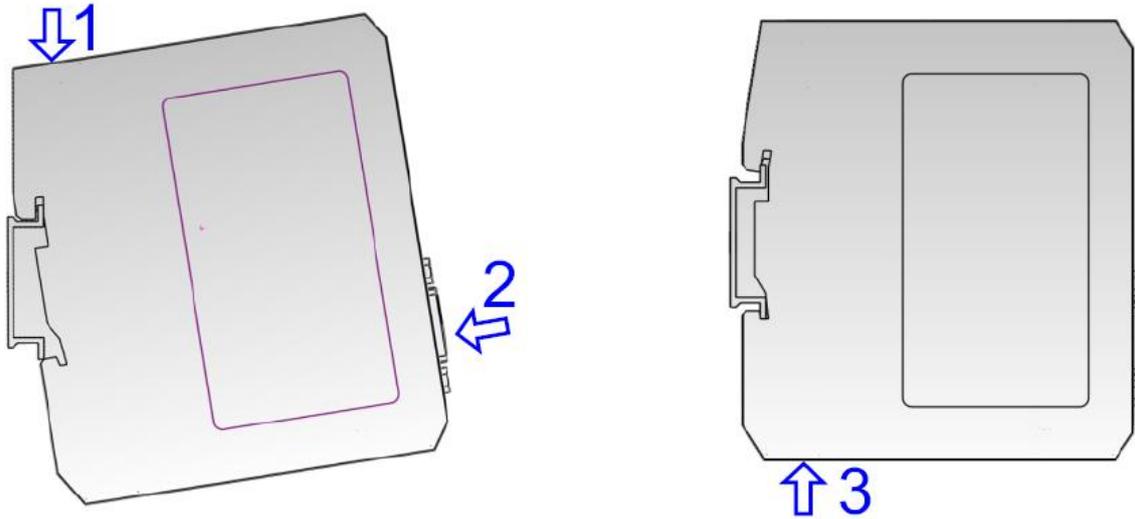

Unloading the gateway

